


# **DRM58 Assembly Guide**

How to change between axial and radial cable routing?



# **Disassembly**



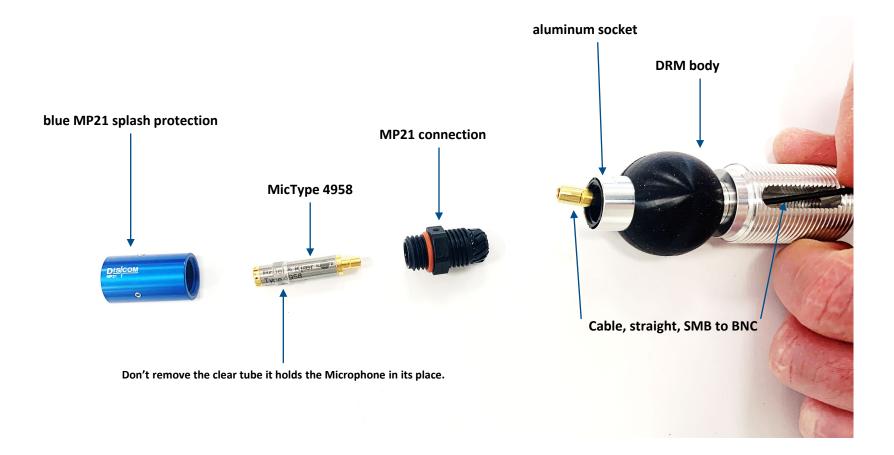

## **Disassembly**



- unfasten the **blue MP21 splash protection**
- unfasten the MP21 connection
- use a **15mm wrench** and an **adjustable wrench**

- pull the microphone out of the **MP21 connenctor** 





# Decision axial/radial cable routing



Depending on the installation of the DRM58 in the test bench, either via M27 male thread or the M8 female thread route the cable into the DRM body



**axial** through the drill hole in the bottom



#### **Assembly**



- connect the **microphone** with the **cable** 

position the microphone back into the
MP21 connector. It needs to protrude
8.3mm from the screw connection.
Make sure that the clear tube is still seated around the microphone.





## **Assembly**

DIS COM

- fasten the MP21 connector carefully a into the DRM body using the wrenches
   until there is just a 1mm distance between the aluminum socket and the MP21 connector
- fasten the **MP21 splash protection** back onto the black **MP21 connection**
- hand tight only!



